

USB driver instruction:

1. Install USB encoder driver, from file. CP210x_VCP_Win2K_XP_S2K3.exe.
2. Plug POS USB cable to computer. Please check port number for “Silicon Labs CP210x USB to UART Bridge”. Please select COM4 from ReadRecord software for this example. It may not be COM4 on your computer.

